

# DecoDirect




## Details

**Colour** The colour of the frame depends on the colour of the shade. Black shades come with black frames. Shades in other colours come with gray frames.

**Information** The top screw holds the round plate on top of the lamp holder. When placing the shade to the frame the top screw should be opened to release the round plate. The shade is placed on the frame so that the fixed round disc on top of the frame is tightly fitted into the hole on top of the shade. The round plate is then screwed back onto the top of the lamp.

The small hook on the frame goes into the small hole in the lower ring of the shade.

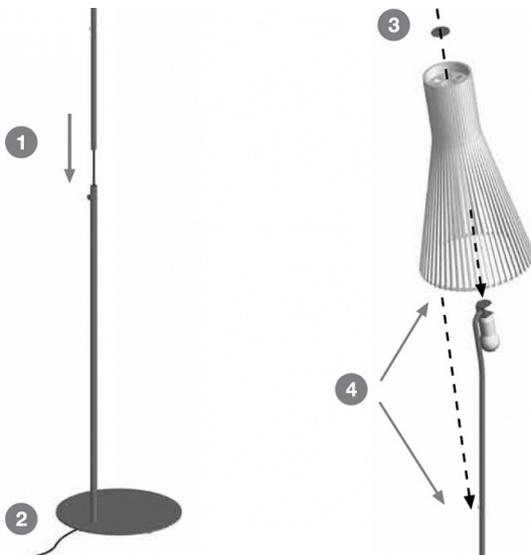

## Assembly instructions

- Step 1** Insert the bottom end of the upper steel tube into the lower steel tube.
- Step 2** Pull down on the cord to tighten. Tighten the black screw on the tube to fasten the cord.
- Step 3** First, open the top screw on the bulb holder, then remove the round plate at the top.
- Step 4** Place the shade on the frame so that the small hook on the upper tube goes into the small hole in the lower ring of the shade. Ensure that the fixed round disc on the top of the frame is tightly fitted into the hole in the middle of the top of the shade. Finally, screw the round plate back onto the top of the lamp.

We suggest the use of a 11 W LED bulb. The use of special bulbs such as halogen, mirror or 12 V is

forbidden due to overheating.

Please ensure that there is always at least 15 mm of space between the bulb and the shade.

